



Position	Part number	Name
1	26800601701	Blade bolt
2	26800800202	Spring washer
3	26800700201	Blade bolt washer
4	503800004	Blade
5	503800005	Blade holder - Fan
6	503500006	Front wheel cover
9	503500009	Front wheel
11	503500012	Pressing plate
12	503800012	Front wheel axle
13	503500014	Rear wheel cover
14	503500017	Rear wheel
15	503800015	Rear wheel axle
18	503800018	Front height adjusting rod
19	503800019	Height adjusting lever
20	503500037	Lever holder
21	503500038	Spring
22	503800022	Pin
23	503800023	Rear height adjusting rod
24	26809000401	Cotter pin
25	503800025	Pressing plate
26	26800703601	Wave washer
28	503500047	Left part of handle
29	503500046	Right part of handle
32	503800032	Left bracket of lower handle
33	503800033	Right bracket of lower handle
35	503500026	Battery controller
40	503800040	Spring
53	25100108505	Plastic washer
54	503500079	Pulling pole holder
55	503500078	Pulling pole
56	503500076	Upper handle foam sheath
58	503500074	Switch button
60	503500073	Switch upper cover
61	503500082	Spring
64	503500071	Spring
65	503500092	Battery display
66	503500086	Cable
69	503500097	Lower fastlocking handle
72	503500096	Bolt
75	503500099	Lower handle bolt
76	503500102	Right adjustment gear
77	503500111	Rear board spring
78	503800078	Rear board axle
80	503800080	Grasscatcher frame
82	503500106	Grasscatcher handle
85	503500039	Height adjusting spring
87	503800087	Grass level indicator
88	503800088	Grasscatcher bag
89	HECHT005046	Charger
90	HECHT005040B	Battery
92	503500093	Upper fastlocking handle
95	503500105	Left adjustment gear